This file contains scalable dynamic blocks for our 1550 Series Picture Window. Here is how to use them:	Figure A	Figure B	Figure C
1. Select the desired picture window. 2. Highlight the block. 3. At the bottom, left of the block is a Visibility Grip. You left click the Grip. (see Figure A) You can select the desired Configuration. 4. Both the Width & Height are similar. (see Figure B & C) Left click the Grip to change the window's Width and/or Height. You can either enter the dimension or drag the grip to the desired Net Frame Width & Height. Please note that the dimensions reflect Net Frame Size NOT Rough Opening. Panel size is +/- 3/6". If panel size is critical, please refer to the factory. This file can be saved in your Design Center.	Left click here to change the configuration	Left click here to change the Window Height. You can either enter the dimension or drag the grip to the desired Net Frame Height	Teft click here to change the door width. Asstems.com (714) 385-1202 Systems.com
			it is given, without the written permission of Win-Dor Inc. www.windors
			Notice: This document co of Win-Dor Inc. and shall is other than that for which
Project: File name: 1550 SH Elevations			Date: 20190815
Notes: Layout: Single Hung Elevation Drawn by: J Johnson			