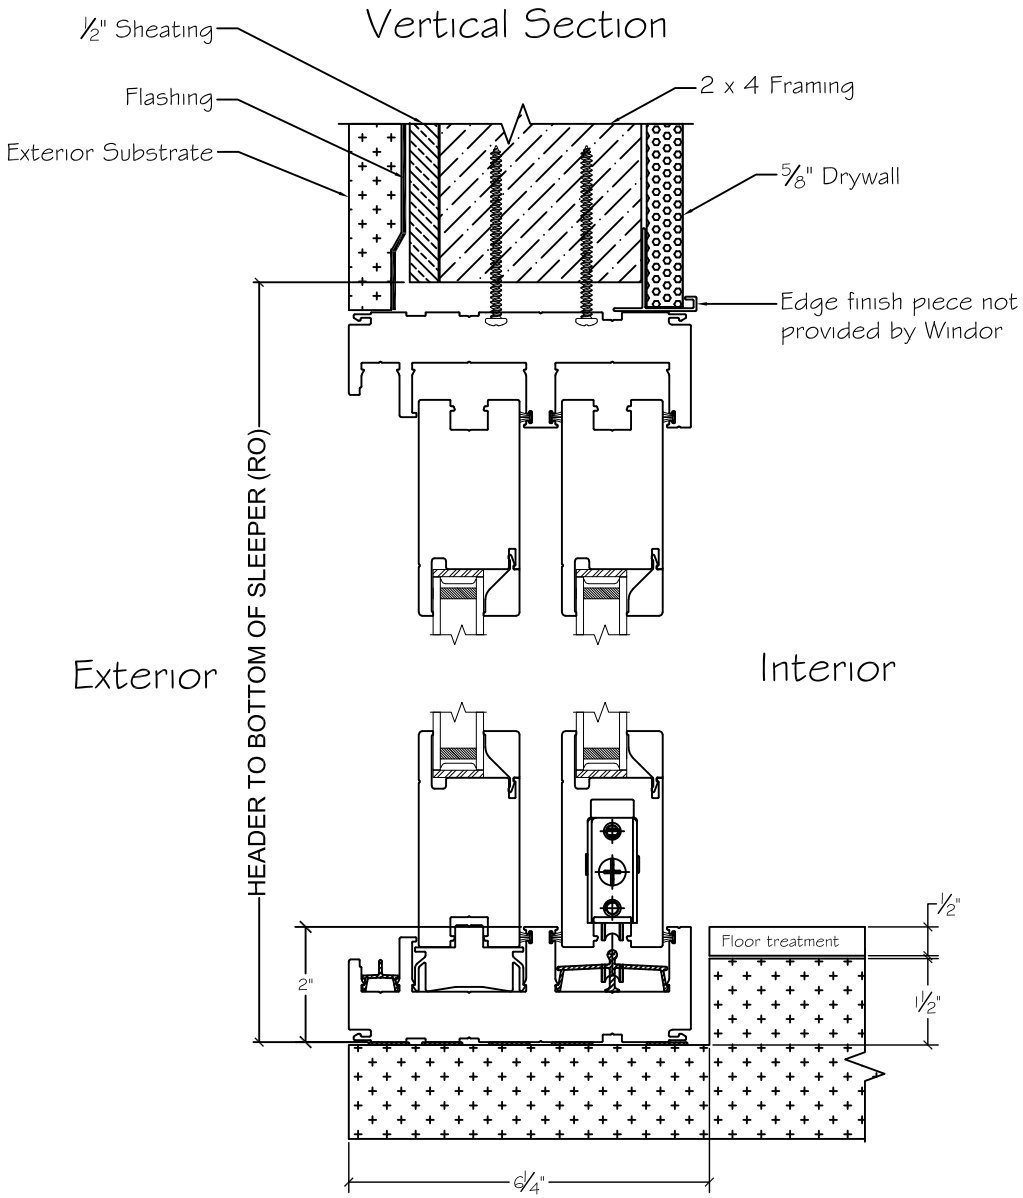

6¼" Sleeper depth takes into acount 5¼" from the exterior framing towards the interior and 1" extending past the exterior framing. The 1" extension is needed to support the outer track. 6¼" sleeper width does not take into account: pans, membranes & sealant provided by others.

450 Delta Ave
Brea, Ca 92821
(714) 385-1202
www.windorsystems.com

Notice: This document contains information proprietary to and is protected by copyright of Win-Dor Inc. and shall not be copied, disclosed to others, or used for any purpose other than that for which it is given, without the written permission of Win-Dor Inc.

Project:	**File name: 3750 Patio Door Wall Detail - Block Frame - 1.5 inch Sleeper Sill**	**Date: 20220825**
Notes:	**Layout: Patio Door with 1.5 inch Sleeper Sill**	**Drawn by: D Deschner**